






 





 

 

 

 

 





 

 

 

 



 
 

 






 



 








Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 HDD	 Shift + 7
 Open/Close	 Eject / Surround
 AV Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR- Tv	 Shift + CH- /
 7	 7
 8	 8
 9	 9

Original	Replacement
 Vol+ Tv	 Vol+
 Rec	 Rec / Rec Mode
 0	 0
 AV Input	 AV / Input / RDS
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 <<	 << / Preset-
 >>	 >> / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up	 Up
 Menu List	 D.Menu / Top
 Left	 Left
 Enter	 OK



