


 






 
 


 



 




 















 

 
 
 
 
 
 
 

 



 


 


 



 





 
 
 


 

 
 
 
 
 
 
 


 
 

 







Original		Replacement		Original		Replacement	
	Power		Power		Pause		Pause
	Radio/Input		AV		Scan >>		>>
	1		1		<< Scan		<<
	2		2		Skip >>		>>
	3		3		<< Skip		<<
	4		4		Rec		Rec
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Mute		Mute
	8		8		Info/Display		Info
	9		9		Home		Smart
	0		0		Return		Back
	Clear		Exit		Disc Menu		D. Menu
	Repeat		Text		Title/PopUp		List
	Open/Close		Eject		Sound Effect		Dual
	Play		Play		Optical		Options
	Stop		Stop		Music ID		Subt





Original		Replacement		Original		Replacement	
	Enter		Ok		PR/CH+ Tv		Ch +
	Up/Presets+		Up		PR/CH- Tv		Ch -
	Down/Presets-		Down				
	Right/Tuning+		Right				
	Left/Tuning-		Left				
	Speaker Level		3D				
	Sleep		Sleep				
	Search		TV/R				
	Marker		Format				
	Red/RDS		Red				
	Green/PTY		Green				
	Yellow/PTY Search		Yellow				
	Blue/Mono/Stereo		Blue				
	Power TV		Shift + Power				
	AV Input Tv		Media				
	Vol+ Tv		Shift + Vol +				
	Vol- Tv		Shift + Vol -				

