








 

 





 



 







 


 




 

 




Original	Replacement	Original	Replacement
 Power	 Power	 I/II	 Dual
 Input TV	 TV/R	 Sleep	 Sleep
 Input	 AV	 Up	 Up
 ARC	 Media	 Down	 Down
 *+	 Shift + Right	 Right	 Right
 -*	 Shift + Left	 Left	 Left
 Text	 Text	 OK	 Ok
 PIP	 3D	 Vol+	 Vol +
 Size	 Format	 Vol-	 Vol -
 Position	 Options	 Mute	 Mute
 Red/PIP PR-	 Red	 PR+	 Ch +
 Green/PIP PR+	 Green	 PR-	 Ch -
 Yellow/Swap	 Yellow	 Q.View	 Smart
 Blue/PIP Input	 Blue	 1	 1
 Exit	 Exit	 2	 2
 List	 List	 3	 3
 Menu	 Menu	 4	 4






 





 
 

 
 








 
 
 
 

 
 
 

 

 







Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	l<<		l<<		8		8
	<<		<<		9		9
	>>		>>		0		0
	>>l		>>l				
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	1		1				
	2		2				
	3		3				





	Original	Replacement		Original	Replacement
	Power		Power		8
	Input		AV		9
	Stop		Stop		0
	Play		Play		
	Pause		Pause		
	Rec		Rec		
	<<		<<		
	>>		>>		
	PR+		Ch +		
	PR-		Ch -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		

