

 

 

 

 

 

 

 

 





Original	Replacement	Original	Replacement
Power	Power	Stop/Mo/St	OK
Disp.Mode	Display / Media	Stop	Stop / Hold
Dimmer	Shift + Mute / Dimmer	>>/>>	>> / Tune+
Mute	Mute / Dimmer	Tun.+	Right
Preset/Folder Up	CH+ / Page+	D.Skip	Yellow / YouTube / Repeat
USB	Shift + 8	Repeat	Green / APP / Repeat
Vol+	Vol+	Repeat	Down
Preset/Folder	CH- / Page-	Program/Memo	TV/Radio /
Function	Menu / Home	RDS	AV / Input / RDS
Vol-	Vol-	PTY	Picture / Format
Sleep	Sleep / Timer	PTY Search	Red / Netflix / Search
Play/Pause	Play / Slow	EQ Master	Subtitle / EQ
Play	Up	XDSS plus	Audio / Lang I/II
Pause	Pause / Step / Freeze	XTS Pro	Sound / Title
Clock	Shift + Sleep / Timer	Random	Blue / Prime Video / Random
<</ <<	<< / Tune-	1	1
Tun.-	Left	2	2





Original	Replacement	Original	Replacement
	3		3
	4		4
	5		5
	6		6
	MP3 Info		Info / Angle
	7		7
	8		8
	9		9
	0		0

