

Original	Replacement	Original	Replacement
Power	 Power	Subtitle	 Subtitle / EQ
OK	 OK	Settings	 Setup / OPT /
Up	 Up	>>	 >>I / Preset+
Down	 Down	>>	 >> / Tune+
Right	 Right	Play	 Play / Slow
Left	 Left	AD / PIP	 Sound / Title
Back	 Back / Return	<<	 I<< / Preset-
Vol +	 Vol+	<<	 << / Tune-
Vol -	 Vol-	Rec	 Rec / Rec Mode
Home / Smart	 Menu / Home	Pause	 Pause / Step / Freeze
3D	 +  Shift + 3	Text	 Text / Goto
Mute	 Mute / Dimmer	FAV	 Fav / Marker / PC
P +	 CH+ / Page+	Exit	 Exit / Cancel / Clear
P -	 CH- / Page-	Input	 AV / Input / RDS
Ratio	 Picture / Format	Blue	 Blue / Prime Video / Random
List	 Smart / List	Yellow	 Yellow / YouTube / Repeat
Q.Menu	 D.Menu / Top	Stop / Live TV	 Stop / Hold



Original	Replacement	Original	Replacement
AV Mode	+ Shift + AV / Input / RDS	5	5
Green	Green / APP / Repeat	Q.View	+ Shift + Display / Media
Red	Red / Netflix / Search	4	4
0	0	Live Zoom	Zoom / Size
AD	Audio / Lang I/II	3	3
TV / PC	+ Shift + Fav / Marker / PC	2	2
Search	+ Shift + Red / Netflix /	1	1
App	+ Shift + Green / APP /	T.Opt	+ Shift + Setup / OPT / Tools
TV / Radio	TV/Radio /	Energy Saving	Eject / Surround
Guide	Guide / EPG / -/--	My APPS	+ Shift + Smart / List
Info	Info / Angle		
Recent	Sleep / Timer		
9	9		
8	8		
7	7		
Live Menu	Display / Media		
6	6		

