
 
 


 
 

 

 





 

 

 





 



 

 



 



 









 



 

Original	Replacement
 Input/Tuner	 AV / Input / RDS
 Power	 Power
 Open/Close	 Eject / Surround
 iPod	 Shift + 8
 PIP	 Zoom / Size
 Display	 Display / Media
 Home	 Menu / Home
 Disc Menu	 D.Menu / Top
 Up/Presets	 Up
 Left/Tun.-	 Left
 Enter	 OK
 Right/Tun.+	 Right
 Down/Presets	 Down
 Return	 Back / Return
 Title/PopUp	 Shift + Sound / Title
 Stop	 Stop / Hold
 Play	 Play / Slow

Original	Replacement
 Pause/step	 Pause / Step / Freeze
 I<< Skip	 I<< / Preset-
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 Skip >>I	 >>I / Preset+
 SKP Level	 Setup / OPT /
 Vol+	 Vol+
 Sound	 Sound / Title
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Night	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Marker	 Fav / Marker / PC
 4	 4
 5	 5





Original	Replacement
 6	 6
 Search	 Shift + Red / Netflix /
 7	 7
 8	 8
 9	 9
 Repeat	 Shift + Green / APP /
 [...] / Subtitle	 Subtitle / EQ
 0	 0
 Resolution	 Picture / Format
 Clear	 Exit / Cancel / Clear
 Red / RDS	 Red / Netflix / Search
 Green / PTY	 Green / APP / Repeat
 Yellow / PTY Search	 Yellow / YouTube / Repeat
 Blue / Mo./St.	 Blue / Prime Video / Random
 Power Tv	 Shift + Power
 PR/CH+ Tv	 CH+ / Page+
 Vol+ Tv	 Shift + Vol+

Original	Replacement
 Input Tv	 Shift + AV / Input / RDS
 PR/CH- Tv	 CH- / Page-
 Vol- Tv	 Shift + Vol-
 Sleep	 Sleep / Timer

