

 




 
 
 

 


 








 



 

 






 

 


 
 

 
 










 



 
 









 






 
 


Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 1	 1	 Info	 Info
 2	 2	 IVI	 Media
 3	 3	 Text	 Text
 4	 4	 T.Opt/Magic Link	 Options
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 Red	 Red
 8	 8	 Green	 Green
 9	 9	 Yellow	 Yellow
 0/Quick Access	 0	 Blue	 Blue
 List	 List	 Up	 Up
 Mute	 Mute	 Down	 Down
 Home/Recents	 Smart	 Right	 Right
 Guide	 Guide	 Left	 Left
 Back/Exit	 Back	 OK	 Ok
 *	 Menu	 Wheel Up	 I<<

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Fast Forward	 Fast Forward	 Stop	 Stop
 Rewind	 Rewind	 Fast Reverse	 Fast Reverse
 DISC NAV	 DISC NAV	 SOUND	 SOUND
 LIST	 LIST	 AD	 AD
 DUAL	 DUAL	 SETTINGS	 SETTINGS
 SEARCH	 SEARCH	 TEXT	 TEXT
 PICTURE	 PICTURE	 OPT	 OPT
 ECO	 ECO	 SLEEP	 SLEEP
 3D	 3D	 TV/R	 TV/R
 TIMER	 TIMER	 FORMAT	 FORMAT
 AV	 AV	 3D	 3D
 TOP MENU	 TOP MENU	 ZOOM	 ZOOM
 INFO	 INFO	 TEXT	 TEXT
 MENU	 MENU	 UP	 UP
 OK	 OK	 DOWN	 DOWN
 LEFT	 LEFT	 RIGHT	 RIGHT
 RIGHT	 RIGHT	 LEFT	 LEFT
 DOWN	 DOWN	 OK	 OK
 UP	 UP	 WHEEL UP	 WHEEL UP
 CLEAR	 CLEAR	 HOME	 HOME
 EXIT	 EXIT	 SMART	 SMART
 BACK	 BACK	 APP	 APP
 VOL +	 VOL +	 MEDIA	 MEDIA
 VOL -	 VOL -	 CH +	 CH +
 1	 1	 CH -	 CH -
 2	 2	 FAV	 FAV
 3	 3	 PRE-CH	 PRE-CH
 4	 4	 A	 A
 5	 5	 B	 B
 6	 6	 C	 C
7	7	 D	 D
8	8	Mandis SHOP	Mandis SHOP
9	9	www.mandis.tv	www.mandis.tv





Original		Replacement		Original		Replacement	
	Wheel Down		>>				
	P+		CH +				
	P-		CH -				
	Vol+		VOL +				
	Vol-		VOL -				

