 

 

 


 

 

 

 

 

 

 

 

 

 

 



 

 





Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 +  Shift + Power
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+ Tv	 Vol+
 Clear	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 AV/Input	 AV / Input / RDS
 Vol- Tv	 Vol-
 <<	 << / Tune-
 >>	 >> / Tune+
 <<	 << / Preset-
 >>	 >> / Preset+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up	 Up
 Info/Display	 Info / Angle
 Right	 Right
 Enter	 OK
 Left	 Left
 Back	 Back / Return
 Down	 Down



