



Original		Replacement		Original		Replacement	
	Power		Power		>>		>> / Tune+
	Open/Close		Eject / Surround		>>		>> / Preset+
	Radio & Input		TV/Radio /		Stop		Stop / Hold
	1		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3		3		Speaker Level		Subtitle / EQ
	4		4		Vol+		Vol+
	5		5		Optical		Setup / OPT /
	6		6		Sound Effect		Sound / Title
	7		7		Vol-		Vol-
	8		8		Mute		Mute / Dimmer
	9		9		Home		Menu / Home
	Clear		Exit / Cancel / Clear		Music ID		Audio / Lang I/II
	0		0		Info/Display		Info / Angle
	Repeat		Shift + Green / APP /		Up/Preset Up		Up
	I<<		I<< / Preset-		Left/Tuning-		Left
	<<		<< / Tune-		Enter		OK





Original	Replacement
Right/Tuning+	Right
Down/Preset	Down
Back	Back / Return
Title/Pop Up	Display / Media
Disc Menu	D.Menu / Top
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue/Mono/Stereo	Blue / Prime Video / Random
Marker	Fav / Marker / PC
Search	Shift + Red / Netflix /
Sleep	Sleep / Timer
Rec	Rec / Rec Mode
Power Tv	Shift + Power
Vol+ Tv	Shift + Vol+
PR/CH+ Tv	CH+ / Page+
AV Input Tv	AV / Input / RDS

Original	Replacement
Vol- Tv	Shift + Vol-
PR/CH- Tv	CH- / Page-

