



Original		Replacement		Original		Replacement	
	Power		Power		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Rec		Rec / Rec Mode
	DVD		Shift + 2		0		0
	VCR		Shift + 4		AV Input		AV / Input / RDS
	Eject/Open-Close		Eject / Surround		Vol- Tv		Vol-
	AV Input Tv		Shift + AV / Input / RDS		<< Scan		<< / Tune-
	1		1		Scan >>		>> / Tune+
	2		2		I<< Skip		I<< / Preset-
	3		3		Skip >>I		>>I / Preset+
	PR+ Tv		Shift + CH+ /		Pause/Step		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR- Tv		Shift + CH- /		PR/TRK+		CH+ / Page+
	7		7		Up		Up
	8		8		Menu/List		D.Menu / Top
	9		9		Left		Left





Original		Replacement		Original	Replacement
	Enter		OK		
	Right		Right		
	Return		Back / Return		
	Down		Down		
	PR/TRK-		CH- / Page-		
	Display		Display / Media		
	O)/Audio		Audio / Lang I/II		
	Title		Sound / Title		
	Marker		Fav / Marker / PC		
	Clear		Exit / Cancel / Clear		
	Red/FAV		Red / Netflix / Search		
	Green/Repeat		Green / APP / Repeat		
	Yellow/Subtitle		Yellow / YouTube / Repeat		
	Blue/Text		Blue / Prime Video / Random		
	EPG		Guide / EPG / -/--		
	Dubbing		Picture / Format		

