 









 
























 











 




 


 







 















 














 










Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Open/Close		Eject / Surround		Title		Shift + Sound / Title
	Home		Shift + Menu /		Marker		Fav / Marker / PC
	FM/AM		Shift + 6		Search		Red / Netflix / Search
	AV		AV / Input / RDS		Zoom		Zoom / Size
	PIP		Picture / Format		Audio/Mo./St.		Audio / Lang I/II
	1		1		Sound		Sound / Title
	2		2		XTS Pro		Shift + Audio / Lang I/II
	3		3		Level/Delay		Smart / List
	Test Tone		Text / Goto		Menu/List		Menu / Home
	4		4		PR/Preset+		CH+ / Page+
	5		5		Up		Up
	6		6		Setup		Setup / OPT /
	[...]/Subtitle		Subtitle / EQ		Left/Tun-		Left
	7		7		Memory/Enter		OK
	8		8		Right/Tun+		Right
	9		9		Display		Display / Media





Original	Replacement	Original	Replacement
 PR/Presets-	 CH- / Page-	 CHP ADD	 Shift + Fav / Marker / PC
 Down	 Down	 Repeat	 Green / APP / Repeat
 Return	 Back / Return	 Repeat A/B	 Yellow / YouTube / Repeat
 I<</Skip-	 I<< / Preset-	 Thumbnail	 Shift + Guide / EPG / -/-
 >>I/Skip+	 >>I / Preset+	 Timeshift	 Info / Angle
 Vol+	 Vol+	 Instant Skip	 Guide / EPG / -/-
 <</Scan-	 << / Tune-	 Clear	 Exit / Cancel / Clear
 >>/Scan+	 >> / Tune+	 RDS/Resolution	 Shift + AV / Input / RDS
 Vol-	 Vol-	 PTY	 D.Menu / Top
 Pause/Step	 Pause / Step / Freeze	 ShowView	 Shift + Smart / List
 Play	 Play / Slow	 Tv/DVD	 TV/Radio /
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 Rec Mode	 Shift + Rec / Rec Mode		
 Timer Rec	 Sleep / Timer		
 Mute	 Mute / Dimmer		
 Dubbing	 Blue / Prime Video / Random		

