











































































 







 

 


 

 








Original	Replacement
 Power	 Power
 Sources	 AV / Input / RDS
 Text	 Text / Goto
 T.Opt	 Setup / OPT /
 AD	 Audio / Lang I/II
 *	 D.Menu / Top
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0

Original	Replacement
 ...	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Search	 Sleep / Timer
 CH-	 CH- / Page-
 TV	 TV/Radio /
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 Prime video	 Shift + Blue / Prime
 Disney+	 Display / Media
 Up	 Up
 Rakuten Tv	 Shift + Yellow / YouTube /
 Left	 Left
 OK	 OK
 Right	 Right





Original	Replacement	Original	Replacement
	Back		Back / Return
	Down		Down
	[→]		Zoom / Size
	List		Smart / List
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

