 

 

 

 

 



 



 




 



 
 



 

 

 

 

 

 

 

 

 



 



 

 

 



 

 

 



 

 

 

 

 

 

 

 



 



Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Open/Close	 Eject / Surround	 Vol+ Tv	 Vol+
 Power Tv	 Shift + Power	 Tv/DVD	 TV/Radio /
 DVD	 Shift + 2	 0	 0
 HDD	 Shift + 7	 Mute Tv	 Mute / Dimmer
 AV	 AV / Input / RDS	 Vol- Tv	 Vol-
 AV Tv	 Smart / List	 Display	 Display / Media
 1	 1	 Text	 Text / Goto
 2	 2	 Tv/Radio	 Shift + TV/Radio / Program
 3	 3	 Rec	 Rec / Rec Mode
 PR+ Tv	 Shift + CH+ /	 Zoom	 Zoom / Size
 4	 4	 Repeat	 Shift + Green / APP /
 5	 5	 << / Tune-	 << / Tune-
 6	 6	 >> / Tune+	 >> / Tune+
 PR- Tv	 Shift + CH- /	 I<< / Preset-	 I<< / Preset-
 7	 7	 >>I / Preset+	 >>I / Preset+
 8	 8	 Pause	 Pause / Step / Freeze





Original	Replacement
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Shift + Home / Menu /
 Up	 Up
 PR+	 CH+ / Page+
 Menu/List	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Guide	 Guide / EPG / -/--
 PR-	 CH- / Page-
 Down	 Down
 Return	 Back / Return
 Red/FAV	 Red / Netflix / Search
 Green/Audio	 Green / APP / Repeat
 Yellow/Subtitle	 Yellow / YouTube / Repeat
 Blue/Timeshift	 Blue / Prime Video / Random

Original	Replacement
 Marker	 Fav / Marker / PC
 Search	 Shift + Red / Netflix /
 Dubbing	 D.Menu / Top
 Clear	 Exit / Cancel / Clear
 Title	 Setup / OPT /
 Thumbnail	 Sound / Title
 Random	 Shift + Blue / Prime
 CHP.ADD	 Picture / Format
 PIP	 Audio / Lang I/II
 Showview	 Subtitle / EQ

