

 





Original		Replacement		Original		Replacement	
	Power		Power		EPG		-/-- / EPG
	Mute		MUTE		Assist		MEDIA
	TV		TV/R		PIP		V-FOR
	Radio		Shift + TV/R		Text / Disc-M		TEXT
	Rec-Menu / Clock		OPT+		Menu		MENU
	Title		VOD		End		EXIT
	Audio		Audio		Info		INFO
	1		1		V+		VOL +
	2		2		V-		VOL -
	3		3		P+		CH +
	4		4		P-		CH -
	5		5		Up		UP
	6		6		Down		DOWN
	7		7		Right		RIGHT
	8		8		Left		LEFT
	9		9		OK		OK
	0		0		Red / C-Set		Red (A)



