





 
 








 

 

 


 

 

 






 

 
















 

 









Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Timer/□□	 Sleep / Timer
 []/T-C	 Picture / Format
 Audio/Repeat	 Shift + Green / APP / REPEAT
 Audio/Repeat	 Audio / Lang I/II
 [+]/Eye/SV	 Display / Media
 →[]←/Disc Menu/SP/LP	 D.Menu / Top
 Radio/Search/000	 Shift + Red / Netflix / SEARCH
 Radio/Search/000	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 */EPG	 Guide / EPG / -/--
 0/AV	 AV / Input / RDS
 0/AV	 0
 #/PIP	 Smart / List
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Text	 Text / Goto
 Info	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+












 

 

 

 






 













 



 



 













Original	Replacement	Original	Replacement
	Down		
	CH- / Page-		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Rec / Rec Mode		
	Pause / Step / Freeze		
	Stop / Hold		

















Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Timer/□□	 Sleep / Timer
 []/T-C	 Picture / Format
 [+]/Eye/SV	 Display / Media
 →[]-/Disc Menu/SP/LP	 D.Menu / Top
 Radio/Search/000	 Shift + Red / Netflix / Search
 Radio/Search/000	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0/AV	 AV / Input / RDS
 0/AV	 0
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Text	 Text / Goto
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random











 

 
 
 

 

 

 
 




 

 







 



 

 



 

 

 

 

 
 
 

 













	Original	Replacement	Original	Replacement
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		











Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Timer/□□	 Sleep / Timer
 []/T-C	 Picture / Format
 Audio/Repeat	 Green / APP / Repeat
 Audio/Repeat	 Audio / Lang I/II
 [+] / Eye/SV	 Display / Media
 →[]← / Disc Menu/SP/LP	 D.Menu / Top
 Radio/Search/000	 Red / Netflix / Search
 Radio/Search/000	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 0/AV	 0
 0/AV	 AV / Input / RDS
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+





Original	Replacement
	 Rec / Rec Mode
	 Pause / Step / Freeze
	 Stop / Hold

Original	Replacement

