


 
 
 
 
 
 
 
 
 
 
 

 

 


 

 

 

 

 

 







 




 








 

 



 

 

 

 




 

 



 














Original	Replacement
 Power	 Power
 Mute	 Mute
 TV	 TV/R
 Audio	 Shift + TV/R
 Clock /Pop-Up M.	 Smart
 ->[]<- / Zoom	 Eject
 Sound	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0

Original	Replacement
 EPG	 Guide
 Media	 Media
 Pip/[]	 3D
 Text / Disc M	 Text
 Text / Disc M	 D. Menu
 Menu	 Menu
 End	 Back
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 P+	 Ch +
 P-	 Ch -




 
 



 


 

 

 

 

 


 














 
 






 

 

 

 



 











 




Original	Replacement	Original	Replacement
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue/Marker	 Blue		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Rec	 Rec		
 Pause	 Pause		
 Stop	 Stop		


 










Original	Replacement	Original	Replacement
 Power	 Power	 Text / Disc-M	 D. Menu
 Pop-Up-M	 Smart	 Menu	 Menu
 →[]← / Zoom	 Eject	 End	 Exit
 1	 1	 Info	 Info
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red	 Red
 0/AV	 0	 Green	 Green
 EPG	 Guide	 Yellow	 Yellow
 Media	 Media	 Blue/Marker	 Blue
 PIP/[]	 3D	 <<	 <<
 Text / Disc-M	 Text	 Play	 Play






 
 



 


 

 

 

 

 

 
 


 







 



 
 


 



 

 

 

 



 





 



 

 


	Original	Replacement
	>>	 >>
	Rec	 Rec
	Pause	 Pause
	Stop	 Stop

	Original	Replacement










Original	Replacement	Original	Replacement
 Power	 Power	 Text / Disc-M	 D. Menu
 Pop-Up-M	 Smart	 Menu	 Menu
 →[]←/Zoom	 Format	 End	 Exit
 1	 1	 Info	 Info
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red	 Red
 0/AV	 0	 Green	 Green
 EPG	 Guide	 Yellow	 Yellow
 Media	 Media	 Blue/Marker	 Blue
 PIP/[]	 3D	 <<	 <<
 Text / Disc-M	 Text	 Play	 Play




 
 
 
 

 
 
 
 
 
 

 

 

 

 

 

 

 

 

 






Original	Replacement	Original	Replacement
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop




 

 






 

 
 
 
 
 





Original	Replacement
 Power	 Power
 Mute	 Mute
 TV	 TV/R
 Audio	 Shift + TV/R
 Pop-Up M	 Smart
 Zoom	 Eject
 Sound	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0

Original	Replacement
 EPG	 Guide
 PIP/[]	 3D
 Media	 Media
 Text / Disc M	 Text
 Text / Disc M	 D. Menu
 Menu	 Menu
 End	 Back
 Info	 Info
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -





Original	Replacement	Original	Replacement
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue/Marker	 Blue		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 <<	 <<		
 >>	 >>		

