









Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 PIP-	 Shift + CH- /
 PIP	 Zoom / Size
 PIP+	 Shift + CH+ /
 Wide	 Picture / Format
 Swap	 Smart / List
 Lang(AD)	 Audio / Lang I/II
 Timers	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Text	 Text / Goto
 0	 0
 AV	 AV / Input / RDS
 i	 Info / Angle
 Vol+	 Vol+
 Tv/Radio	 TV/Radio /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 PR-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/-
 Up	 Up





	Original	Replacement	Original	Replacement
		Exit		Exit / Cancel / Clear
		Left		Left
		OK		OK
		Right		Right
		Menu		Menu / Home
		Down		Down
		Back/P<P		Back / Return
		Subtitle		Subtitle / EQ
		<<		<< / Tune-
		Play		Play / Slow
		>>		>> / Tune+
		LIB		Setup / OPT /
		Stop		Stop / Hold
		Pause		Pause / Step / Freeze
		Rec		Rec / Rec Mode

