


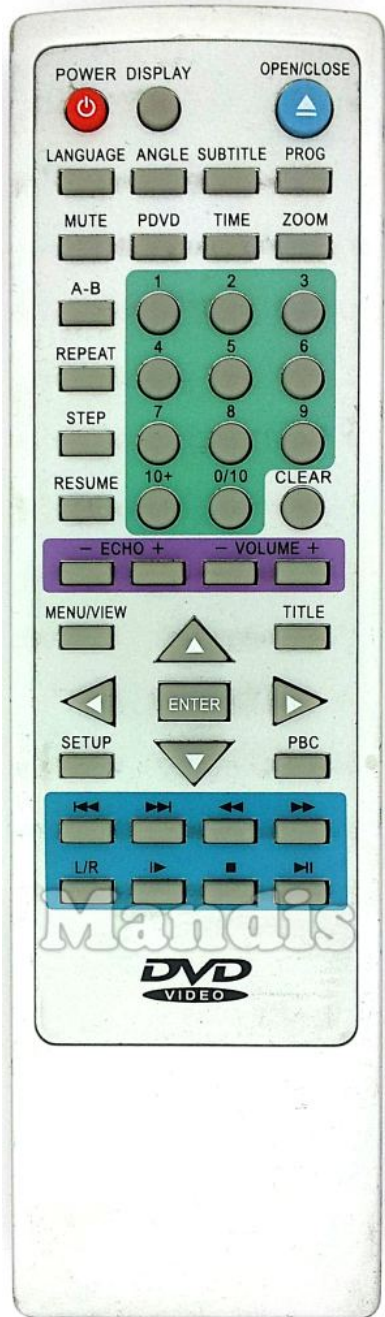


 














Original	Replacement
Power	Power
Display	Display / Media
Open/Close	Eject / Surround
Language	Audio / Lang I/II
Angle	Info / Angle
Subtitle	Subtitle / EQ
Prog	TV/Radio /
Mute	Mute / Dimmer
PDVD	AV / Input / RDS
Time	Sleep / Timer
Zoom	Zoom / Size
A-B	Yellow / YouTube / Repeat
1	1
2	2
3	3
Repeat	Green / APP / Repeat
4	4

Original	Replacement
5	5
6	6
Step	Shift + Pause / Step /
7	7
8	8
9	9
Resume	Smart / List
10+	Guide / EPG / -/-
0/10	0
Clear	Exit / Cancel / Clear
Echo-	CH- / Page-
Echo+	CH+ / Page+
Volume-	Vol-
Volume+	Vol+
Menu/View	Menu / Home
Up	Up
Title	Sound / Title





Original	Replacement	Original	Replacement
	Left		Left
	Enter		OK
	Right		Right
	Setup		Setup / OPT /
	Down		Down
	PBC		Picture / Format
	L<<		L<< / Preset-
	>>L		>>L / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	L/R		Text / Goto
	L>		Pause / Step / Freeze
	Stop		Stop / Hold
	Play/Pause		Play / Slow

