


 



 
 




 
 

 


 

 




Original	Replacement	Original	Replacement
	Power		Power
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv/Radio		TV/R
	Zoom		Eject
	List		List
	Help		Media
	Audio		Dual
	EPG		Guide
	Timer		AV
	Text		Text
	Exit		Exit
	Menu		Menu
	MP		Format
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	P+		>>
	P-		>>
	Recall		Back
	FAV		Pre Ch
	1		1
	2		2
	3		3
	4		4





Original	Replacement	Original	Replacement
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Info	 INFO		
 Pause	 II		

