

 













Original	Replacement	Original	Replacement
 Power	 Power	 Display	 Display / Media
 Mute	 Mute / Dimmer	 TV / Radio	 TV/Radio /
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu / Home
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 -/--	 Shift + Guide / EPG / -/--	 Auto	 Eject / Surround
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 EPG	 Guide / EPG / -/--	 Aspect	 Zoom / Size
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Source	 AV / Input / RDS





Original	Replacement
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Text	Play / Slow
Play/Pause / Text	Pause / Step / Freeze
Play/Pause / Text	Text / Goto
Stop / Index	Stop / Hold
Mix	Smart / List
Reveal	Setup / OPT /
<< / Hold	<< / Tune-
>> / Subpage	>> / Tune+
I<< / Size	I<< / Preset-
>>I / Cancel	>>I / Preset+
TimeShift	D.Menu / Top
Rec	Rec / Rec Mode
FAV-	Shift + CH- /
FAV+	Shift + CH+ /

Original	Replacement
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

