



Original	Replacement
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Shift + Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Back	Back / Return

Original	Replacement
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Audio	Audio / Lang I/II
CH-	CH- / Page-
Sub-T	Subtitle / EQ
Menu	Menu / Home
[i+]/Info	Info / Angle
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
DVD Setup	Shift + 2





Original	Replacement
	Rec / Rec Mode
	Sleep / Timer
	Red / Netflix / Search
	TV/Radio /
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Play /
	Shift + Up
	Shift + Down
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	>>I / Preset+
	<< / Tune-
	Guide / EPG / -/--
	>> / Tune+

Original	Replacement
	♥-/D.Disp
	♥/D.Title
	♥+/D.Goto
	Shift + Guide / EPG / -/--
	Fav / Marker / PC
	Text / Goto

