


 



 






 
 



 

 






Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ↑/FF	 >>
 ↓/REW	 <<
 Menu	 Menu
 Exit	 Exit
 List/OK	 Ok

Original	Replacement
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Program+	 Ch +
 Program-	 Ch -
 Info	 Info
 Tv/Radio	 TV/R
 EPG	 Guide
 AV/TV	 AV
 UHF	 Smart
 PAL/NTSC	 Format
 ←PR	 Back
 Rec	 Rec
 Stop	 Stop





	Original	Replacement	Original	Replacement
	Play	 Play		
	Pause	 Pause		
	II	 3D		
	Red/Audio	 Red		
	Green/Position	 Green		
	Yellow	 Yellow		
	[...]	 Subt		
	Blue	 Blue		
	Audio L/R	 Dual		
	FN	 Media		
	←/SAT	 Text		
	·/FAV	 Pre Ch		

