







 



 






 



 





 


Original	Replacement
 Standby	 Power
 Sleep	 Sleep
 Dimmer	 Media
 Open/Close	 Eject
 Audio	 Dual
 Angle	 List
 Subtitle	 Subt
 Search	 TV/R
 CLR	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0/10	 0
 10+	 Guide
 Title	 Back
 Menu	 Menu
 Program	 Shift + Sleep
 Display	 Info
 PAL/NTSC	 Format
 Digest	 Blue
 Setup	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -





Original		Replacement	
	Mute		Mute
	Mark		Green
	Zoom		Shift + Eject
	A-B		D. Menu
	I>/Slow		Rec
	Repeat		Text
	<</ F RWD		<<
	>>/F FWD		>>
	I<</Skip-		I<<
	>>I/Skip+		>>I
	Stop		Stop
	Pause/Step		Pause
	Play		Play
	Card		Smart
	Shuffle		Pre Ch
	3D		3D
	Video Out		AV

Original		Replacement	

