
 


 



 

 



 







| Original | Replacement | Original | Replacement |
|--------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
|  Power |  Power |  FAV- |  Shift + CH- / |
|  Mute |  Mute / Dimmer |  CH+ |  CH+ / Page+ |
|  1 |  1 |  P.Mode |  Picture / Format |
|  2 |  2 |  Vol+ |  Vol+ |
|  3 |  3 |  CH- |  CH- / Page- |
|  4 |  4 |  S.Mode |  Sound / Title |
|  5 |  5 |  Vol- |  Vol- |
|  6 |  6 |  Source |  AV / Input / RDS |
|  7 |  7 |  Sleep |  Sleep / Timer |
|  8 |  8 |  Aspect |  Shift + Picture / Format |
|  9 |  9 |  Info |  Info / Angle |
|  -/-- |  Shift + Guide / EPG / -/-- |  Up |  Up |
|  0 |  0 |  Left |  Left |
|  Recall |  Back / Return |  OK |  OK |
|  Audio |  Audio / Lang I/II |  Right |  Right |
|  FAV+ |  Shift + CH+ / |  Menu |  Menu / Home |
|  FAV |  Fav / Marker / PC |  Down |  Down |



