




















 










 







 



 



 



 







 



 

















 



 

 

 

 

 

 

 





| Original | Replacement | Original | Replacement |
|---|--|---|---|
|  Power |  Power |  Mute |  Mute / Dimmer |
|  Tv/AV |  AV / Input / RDS |  Vol- |  Vol- |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  CH+ |  CH+ / Page+ |
|  3 |  3 |  Vol+ |  Vol+ |
|  Eject |  Eject / Surround |  Left |  Left |
|  4 |  4 |  OK |  OK |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Sys Menu |  D.Menu / Top |
|  Play/Pause |  Play / Slow |  CH- |  CH- / Page- |
|  7 |  7 |  Down |  Down |
|  8 |  8 |  Display |  Display / Media |
|  9 |  9 |  Picture |  Picture / Format |
|  Stop |  Stop / Hold |  Sound |  Sound / Title |
|  0 |  0 |  Timer |  Sleep / Timer |
|  -/-- |  Shift + Guide / EPG / -/-- |  Nicam/A2 |  Audio / Lang I/II |
|  Return |  Back / Return |  Lan/Prog- |  Shift + CH- / Page- |

| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Mute |  Mute / Dimmer |  Vol- |  Vol- |
|  Up |  Up |  CH+ |  CH+ / Page+ |
|  Vol+ |  Vol+ |  Left |  Left |
|  OK |  OK |  Right |  Right |
|  Sys Menu |  D.Menu / Top |  CH- |  CH- / Page- |
|  Down |  Down |  Display |  Display / Media |
|  Picture |  Picture / Format |  Sound |  Sound / Title |
|  Timer |  Sleep / Timer |  Nicam/A2 |  Audio / Lang I/II |
|  Lan/Prog- |  Shift + CH- / Page- | | |





| Original | Replacement |
|-------------------|---------------------------|
| Zoom/Prog+ | Shift + CH+ / |
| Sub | Subtitle / EQ |
| Goto | Text / Goto |
| SET | Setup / OPT / |
| MENU | Menu / Home |
| ANG/Reveal/Exit | Exit / Cancel / Clear |
| Title/info | Shift + Sound / Title |
| <</Hold/Languag | << / Tune- |
| >>/Size/Text | >> / Tune+ |
| <</Subpage | << / Preset- |
| FAV | Fav / Marker / PC |
| >> /Index | >> / Preset+ |
| EPG | Guide / EPG / -/-- |
| Red/Pro | Red / Netflix / Search |
| Tv/Radio | TV/Radio / |
| Green/Slow/Audio | Green / APP / Repeat |
| Yellow/Rep/Freeze | Yellow / YouTube / Repeat |

| Original | Replacement |
|-------------------|-----------------------------|
| Blue/A-B/Subtitle | Blue / Prime Video / Random |

