



Original	Replacement	Original	Replacement
	Power		Power
	Last		Pre Ch
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/R		TV/R
	Audio		Dual
	Info		Info
	Mode		D. Menu
	Favor		Options
	Menu		Menu
	Sub-T		Subt
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue




 

 
 




 



 
 







 

 
Original		Replacement	
	EPG		Guide
	Text		Text

Original		Replacement	







Original	Replacement	Replacement
Power		Power
Last		Pre Ch
Mute		Mute
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
TV/R		TV/R
Audio		Dual
Info		Info
Mode		D. Menu

Original	Replacement	Replacement
Favor		Options
Menu		Menu
Sub-T		Subt
Exit		Exit
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
CH+		Ch +
CH-		Ch -
Vol+		Vol +
Vol-		Vol -
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Original	Replacement	Original	Replacement
EPG	 Guide		
Text	 Text		





Original	Replacement	Original	Replacement
Power		Power	Power
Last		Pre Ch	Pre Ch
Mute		Mute	Mute
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
TV/R		TV/R	TV/R
Audio		Dual	Dual
Info		Info	Info
Mode		D. Menu	D. Menu

Original	Replacement	Original	Replacement
Favor		Options	Options
Menu		Menu	Menu
Sub-T		Subt	Subt
Exit		Exit	Exit
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Replacement	Original	Replacement
EPG	 Guide		
Text	 Text		

