





Original		Replacement		Original		Replacement	
	Power		Power		Menu		MENU
	Mute		MUTE		EPG		-/-- / EPG
	1		1		Exit		EXIT
	2		2		Up		UP
	3		3		CH+		CH +
	4		4		CH-		CH -
	5		5		Down		DOWN
	6		6		Right		RIGHT
	7		7		Vol+		VOL +
	8		8		Left		LEFT
	9		9		Vol-		VOL -
	0		0		OK		OK
	FAV		P/C / FAV		Red		Red (A)
	Recall		BACK		Language		Audio
	DTV/VCR		VOD		Green		Green (B)
	TV/Format		V-FOR		Audio		OPT+
	Info		INFO		Yellow		Yellow (C)



