


 

 



 

 







 

 

 

 












Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 Back
 Vol +	 Vol +
 Vol -	 Vol -
 Nicam	 Smart

Original	Replacement
 Display	 Info
 CH +	 Ch +
 CH -	 Ch -
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 LCD Menu	 Menu
 Exit	 Exit
 Input	 AV
 PMode	 Shift + Format
 SMode	 Shift + Dual
 Sleep	 Sleep
 Fav	 Pre Ch
 Fav -	 Shift + Down
 Fav +	 Shift + Up





	Original	Replacement	Original	Replacement
	Aspect	 Format		
	Play/Pause / Text	 Play		
	Play/Pause / Text	 Pause		
	Play/Pause / Text	 Text		
	Stop / Hold	 Stop		
	Lang	 Dual		
	Subtitle	 Subt		
	>> / Index	 >>		
	<< / Size	 <<		
	>>I / Reveal	 >>I		
	I<< / Subpage	 I<<		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

