 
 

 

 

 
 


 




Original	Replacement
 Standby	 Power
 Source	 AV / Input / RDS
 Freeze	 Pause / Step / Freeze
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 TV / Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0

Original	Replacement
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Play / Pause	 Play / Slow
 Down	 Down
 Stop	 Stop / Hold
 Vol +	 Vol+
 TXT	 Text / Goto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 CH -	 CH- / Page-
 Mix / Fav. List	 Fav / Marker / PC





	Original	Replacement	Original	Replacement
SUBTITLE SIZE	Size / Subtitle	EQ SUBTITLE		Subtitle / EQ
AUDIO CANCEL	Cancel / Audio	LANG I/II AUDIO		Audio / Lang I/II
	Zoom	SIZE ZOOM		Zoom / Size
	<< / Index	TUNE-		<< / Tune-
	>> / Hold	TUNE+		>> / Tune+
	I<< / Reveal	PRESET-		I<< / Preset-
	>>I / Subpage	PRESET+		>>I / Preset+
	Red	NETFLIX SEARCH		Red / Netflix / Search
	Green	APP REPEAT		Green / APP / Repeat
	Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM		Blue / Prime Video / Random

