 

 
















 

 

 

 
 

 
 



 


 
 

 

 


 



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Display		Info
	QV		Options
	Picture		Shift + Format
	Sound		Shift + Dual
	Source		AV
	EPG		Guide
	FAV +		>>
	FAV -		<<
	FAV		Pre Ch
	Menu		Menu
	Size		Format
	I/II / Top		Dual
	Exit		Exit
	Vol -		Vol -
	Vol +		Vol +
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	CH -		Ch -
	CH +		Ch +
	Red / USB Left		Red
	Red / USB Left		Shift + Left
	Green / USB		Green
	Green / USB		Shift + Down
	Yellow / USB Up		Yellow
	Yellow / USB Up		Shift + Up
	Blue / USB Right		Blue
	Blue / USB Right		Shift + Right
	1		1
	2		2




 


 

 

 

 





 

 

 
 

 


 

 







Original	Replacement	Original	Replacement
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	10+		Shift + Guide
	USB/CR / Text		Media
	USB/CR / Text		Text
	Play/Pause / Index		Play
	Play/Pause / Index		Shift + Info
	Play/Pause / Index		Pause
	Stop / Cancel		Stop
	Stop / Cancel		Shift + Exit

Original	Replacement	Original	Replacement
	SUBTL		Subt
	Prog / Mix		Smart
	Prog / Mix		Shift + Sleep
	Return / SUBPG		Back
	Repeat / Reveal		Shift + Text
	Search / Hold		TV/R





Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

