

 
 



 





 


 

 
 

 
 
 
 

 
 
 



 

 





 
 


 
 
 

 



 
 


 
 
 
 

 
 
 
 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 [≡i]/Info	 Info	 Down	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Enter	 Ok
 3	 3	 Index	 Media
 4	 4	 List	 List
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 ♥	 Pre Ch
 0	 0	 Sleep	 Sleep
 [≡?]/Source	 AV	 EPG	 Guide
 (O/I/II/Audio	 Dual	 Recall	 Back
 Menu	 Menu	 Red	 Red
 Exit	 Exit	 <<	 <<





	Original	Replacement	Original	Replacement
	Green	B		
	Yellow	C		
	I<<			
	>>I			
	Blue	D		
	[=]	REPEAT TEXT		
	Play	PLAY MODE		
	Pause			
	Stop/Still			
	[=+]	PICTURE FORMAT		
	Radio	SEARCH TV/R		
	[=◆]/[+]	ECO 3D		
	[=x]	SETTINGS OPT		
	[=O]/Subtitle	AD SUBT		
	DMP	HOME SMART		
	Rec	REC MODE		

