


 















 






 



 






































 



 

 



















Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 << / Tune-
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH +	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol +	 Vol+
 6	 6	 CH -	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol -	 Vol-
 9	 9	 Fav	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio I/II	 Audio / Lang I/II	Recall	Back / Return
Menu	Menu / Home	Red / <<	<< / Tune-
Exit	Exit / Cancel / Clear	Red / <<	Red / Netflix / Search






























 




 
 
 

















 





 

 





Original	Replacement	Original	Replacement
 Green / >>>	 >>> / Tune+		
 Green / >>>	 Green / APP / Repeat		
 Yellow / I<<<	 I<<< / Preset-		
 Yellow / I<<<	 Yellow / YouTube / Repeat		
 Blue / >>>I	 >>>I / Preset+		
 Blue / >>>I	 Blue / Prime Video / Random		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Play / Slow		
 Text / Play/Pause	 Pause / Step / Freeze		
 Stop / Still	 Stop / Hold		
 Radio	 TV/Radio /		
 Size / Aspect	 Picture / Format		
 Size / Aspect	 Zoom / Size		
 [≡x]	 Eject / Surround		
 Subtitle / [≡o]	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		





Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O)/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 <<	 << / Tune-

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 TV	 DVD	 Left	 Left
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 MENU	 ANGLE	 INFO	 INFO
 CLEAR	 EXIT	 RETURN	 OK
 EXIT	 CANCEL	 LIST	 BACK
 VOL+	 SMART	 MEDIA	 CH PAGE
 VOL-	 DISPLAY	 CH PAGE	 CH PAGE
 TV	 DVD	 CD- STB	 TV
 VIDEO	 TAPE	 TUNER	 VIDEO
 AUX - HDD	 USB	 BLUETOOTH	 AUX - HDD
 GUIDE EPG	 HDMI - BAT	 PC	 GUIDE EPG
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM





Original		Replacement		Original	Replacement
	Green		Green / APP / Repeat		
	>>		>> / Tune+		
	Yellow		Yellow / YouTube / Repeat		
	I<<		I<< / Preset-		
	Blue		Blue / Prime Video / Random		
	>>I		>>I / Preset+		
	[≡]		Text / Goto		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	[≡+]		Shift + Stop /		
	Stop/Still		Stop / Hold		
	Radio		TV/Radio /		
	[≡♦]/[++]		Zoom / Size		
	[≡x]		Eject / Surround		
	[≡o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		

