









Original	Replacement
	 Power
	 Display / Media
	 Setup / OPT /
	 Mute / Dimmer
	 Menu / Home
	 Sound / Title
	 Fav / Marker / PC
	 Zoom / Size
	 TV/Radio /
	 Info / Angle
	 Vol-
	 Vol+
	 Guide / EPG / -/-
	 Back / Return
	 Up
	 Left
	 OK

Original	Replacement
	 Right
	 Down
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Picture / Format
	 0
	 Text / Goto
	 Rec / Rec Mode
	 Play / Slow
	 Stop / Hold





	Original	Replacement	Original	Replacement
	Timer	Sleep / Timer		
	Pause/Step	Pause / Step / Freeze		
	I>/Slow	Eject / Surround		
	I<<	I<< / Preset-		
	Rec List	Smart / List		
	←/INS Replay	CH- / Page-		
	→/CM Skip	CH+ / Page+		
	>>I	>>I / Preset+		
	A-B	Yellow / YouTube / Repeat		
	Subtitle	Subtitle / EQ		
	Repeat	Green / APP / Repeat		
	<<	<< / Tune-		
	F1	D.Menu / Top		
	Source	AV / Input / RDS		
	Audio	Audio / Lang I/II		
	>>	>> / Tune+		

