


 



 

 


 
 

 
 








 











 


 








 

 

 



 

 



 

 

 




	Original	Replacement		Original	Replacement
	 Power	 Power		 Exit	 Exit
	 Mute	 Mute		 Up	 Up
	 1	 1		 Down	 Down
	 2	 2		 Right	 Right
	 3	 3		 Left	 Left
	 4	 4		 Ok	 Ok
	 5	 5		 Vol+	 Vol +
	 6	 6		 Vol-	 Vol -
	 7	 7		 Sound	 Shift + Dual
	 8	 8		 Pic	 Shift + Format
	 9	 9		 Ch+	 Ch +
	 0	 0		 Ch-	 Ch -
	 Audio	 Dual		 Sleep	 Sleep
	 Recall	 Back		 Aspect	 Format
	 Tv Menu	 Menu		 Freeze	 Eject
	 Source	 AV		 Tv/Radio	 TV/R
	 ChList	 List		 Text	 Text





	Original	Replacement		Original	Replacement
	Epg	Guide		I<<	I<<
	Fav	Pre Ch		>>I	>>I
	Info	Info		Play	Play
	Red	Red		Pause	Pause
	Green	Green		Stop	Stop
	Yellow	Yellow		Rec/Rep	Rec
	Blue	Blue			
	Reveal	Media			
	Hold	D. Menu			
	Index	Shift + Info			
	Subpage	Shift + AV			
	List	Smart			
	Mix	Options			
	Subtitle	Subt			
	Size	3D			
	<<	<<			
	>>	>>			

