





 










 
 



 
 









 

 






 



 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Auto	 Smart / List
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Display	 Display / Media
 Nicam	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 +/-	 Shift + Guide / EPG / +/-
 Recall	 Back / Return
 LCD Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Text	 Text / Goto
 Hold	 Stop / Hold





Original		Replacement	
	Index		D.Menu / Top
	Size		Zoom / Size
	EPG		Guide / EPG / -/--
	Subtitle		Subtitle / EQ
	Subpage		Shift + Subtitle / EQ
	Reveal		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	FAV-		<< / Tune-
	FAV+		>> / Tune+
	Lang		Audio / Lang I/II
	Aspect		Shift + Picture / Format

Original		Replacement	

