
























 







































| Original | Replacement |
|---------------|---|
| On/Off |  Power |
| 3.* |  +  Shift + 3 |
| Store |  Setup / OPT / |
| Reveal |  Play / Slow |
| On/Off |  +  Shift + Power |
| Tune+ |  >> / Tune+ |
| Tune- |  << / Tune- |
| 4 |  4 |
| 5 |  5 |
| 6 |  6 |
| 7 |  7 |
| 8 |  8 |
| 9 |  9 |
| Guide -/-- 1. |  Guide / EPG / -/-- |
| 0/10 |  0 |
| 2.Fav P/C 2. |  Fav / Marker / PC |
| Red |  Red / Netflix / Search |

| Original | Replacement |
|-----------------|---|
| Green |  Green / APP / Repeat |
| Yellow |  Yellow / YouTube / Repeat |
| Blue |  Blue / Prime Video / Random |
| Tone- |  I<< / Preset- |
| Tone+ |  >>I / Preset+ |
| 3 |  3 |
| Audio+ |  +  Shift + Vol+ |
| Search |  +  Shift + Red / Netflix / |
| 4.# 16:9 |  Picture / Format |
| Surround |  Eject / Surround |
| Nicam/Mono |  +  Shift + Audio / Lang I/II |
| Level L |  +  Shift + Left |
| Level R/Woofers |  +  Shift + Right |
| Display |  Display / Media |
| Mute |  Mute / Dimmer |
| Txt Stop |  Stop / Hold |
| Info |  Info / Angle |



| Original | Replacement | Original | Replacement |
|-------------|---|------------|---|
| Subt.List |  Subtitle / EQ | Volume- |  Vol- |
| Sleep Timer |  Sleep / Timer | Menu audio |  Audio / Lang I/II |
| Return TV |  TV/Radio / | Chan.Down |  CH- / Page- |
| Menu video |  D.Menu / Top | 1 |  1 |
| Text |  Text / Goto | 2 |  2 |
| Txt Expand |  Zoom / Size | | |
| TV/AV |  AV / Input / RDS | | |
| Menu |  Menu / Home | | |
| Menu Up |  Up | | |
| Menu Left |  Left | | |
| OK Enter |  OK | | |
| Menu Right |  Right | | |
| Menu Off |  Exit / Cancel / Clear | | |
| Menu Down |  Down | | |
| Back |  Back / Return | | |
| Volume+ |  Vol+ | | |
| Chan.Up |  CH+ / Page+ | | |

