 

 

 


 





 

 





















 





 












 



 

 



 
 
 
 
 



 

 
 



 



 

 
 




 


 
 
 
 



 
 
 






 




Original	Replacement	Original	Replacement
 Power On	 Power	 I<<	 I<<
 Power/Standby	 Shift + Power	 Play	 Play
 Sleep	 Sleep	 >>I	 >>I
 Display/DVD	 Media	 <<	 <<
 OSD Menu	 Menu	 Stop	 Stop
 CH+	 Ch +	 >>	 >>
 CH-	 Ch -	 Rec	 Rec
 Vol+	 Vol +	 Pause	 Pause
 Vol-	 Vol -	 Eject	 Eject
 Up	 Up	 Input Sel. DVD	 Options
 Left	 Left	 Input Sel. Multi	 Dual
 Enter	 Ok	 Input Sel. CD	 Text
 Right	 Right	 Input Sel. Tun	 AV
 Down	 Down	 Input Sel. Tap	 Format
 Exit/Return	 Exit	 Input Sel. PH	 3D
 Test/Tv/VCR	 TV/R	 Input Sel. PIP V1	 Red
 Muting	 Mute	 Input Sel. PIP V2	 Green





Original	Replacement	Original	Replacement
 Power	 Power	 1	 1
 Enter	 Ok	 2	 2
 Display DVD	 Media	 3	 3
 Up	 Up	 4	 4
 OSD Menu	 Menu	 5	 5
 Down	 Down	 6	 6
 Exit/Return	 Exit	 7	 7
 Right	 Right	 8	 8
 I<<	 I<<	 9	 9
 Left	 Left	 0	 0
 Play	 Play	 +10	 Guide
 >>I	 >>I	 Level-	 Pre Ch
 <<	 <<		
 Stop	 Stop		
 >>	 >>		
 Pause	 Pause		
 Eject	 Eject		







Original		Replacement		Original		Replacement	
	Track		Smart		8		8
	Disc		Media		9		9
	I<<		I<<		0		0
	Play		Play		+10		Guide
	>>I		>>I				
	<<		<<				
	Stop		Stop				
	>>		>>				
	Pause		Pause				
	Eject		Eject				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				





Original		Replacement		Original		Replacement	
	Power		Power		8		8
	l<<		l<<		9		9
	Play		Play		+10		Guide
	>>l		>>l		Ent		Pre Ch
	<<		<<				
	Stop		Stop				
	>>		>>				
	Rec		Rec				
	Pause		Pause				
	Eject		Eject				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

