



 


 



 






































 




 



 



 

 





 




Original	Replacement	Original	Replacement
 RCVR On	 Power	 RCVR Test / Menu	 Menu
 RCVR Standby	 Shift + Power	 RCVR Audio	 Dual
 RCVR Sleep	 Sleep	 RCVR Level	 Media
 RCVR Return	 Back	 RCVR Level Up	 Smart
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR Disc+	 Ch +	 RCVR Play	 Play
 RCVR Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Up	 Up	 RCVR <<	 <<
 RCVR Left	 Left	 RCVR Stop	 Stop
 RCVR Enter	 Ok	 RCVR >>	 >>
 RCVR Right	 Right	 RCVR Rec /	 Rec
 RCVR Down	 Down	 RCVR Pause / Play Rev.	 Pause
 RCVR Vol+	 Vol +	 Open / Close	 Eject
 RCVR Vol-	 Vol -	 RCVR Input Sel.	 1
 RCVR Muting	 Mute	 RCVR Input Sel.	 2
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR Input Sel.	 3
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Input Sel.	 4















 








 




 
 

 

 



 



 












 


 

 





 







Original	Replacement	Original	Replacement
	RCVR Input Sel.		5
	RCVR Input Sel.		6
	RCVR Input Sel.		7
	RCVR Input Sel.		8
	RCVR Input Sel.		9
	RCVR Input Sel.		0
	RCVR Stereo		+  Shift + 1
	RCVR Direct		+  Shift + 2
	RCVR DSP ►		+  Shift + 3
	RCVR SURR		+  Shift + 4
	RCVR THX		+  Shift + 5
	RCVR ◀ DSP		+  Shift + 6
	RCVR SP A		+  Shift + 7
	RCVR SP B		+  Shift + 8
	RCVR Re-EQ		+  Shift + 9
	RCVR Dimmer		+  Shift + 0
	RCVR Display		Info

Original	Replacement	Original	Replacement
	RCVR Display		Guide
	RCVR Zone 2		Pre Ch





Original	Replacement	Original	Replacement
	 Power		 Subt
	 +  Shift + Power		
	 Back		 Play
	 Options		
	 Ch +		
	 Ch -		
	 Up		
	 Left		 Text
	 Ok		
	 Right		 Eject
	 Down		
	 Vol +		
	 Vol -		
	 Mute		
	 D. Menu		
	 Menu		
	 Format		




 



 














 



 
 













 












	Original	Replacement	Original	Replacement
	8			
	9			
	0			
	+10			
	Search			



 


 
 









 

 
 














 







Original	Replacement	Original	Replacement
	 Power		 3
	 Shift + Power		 4
	 Ch +		 5
	 Vol +		 6
	 Vol -		 7
	 Mute		 8
	 I<<		 9
	 Play		 0
	 >>I		 Guide
	 <<		
	 Stop		
	 >>		
	 Text		
	 Pause		
	 Eject		
	 1		
	 2		





Original		Replacement		Original		Replacement	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	I<<		I<<		8		8
	Play		Play		9		9
	>>I		>>I		0		0
	<<		<<		+10		Guide
	Stop		Stop		Enter		Pre Ch
	>>		>>		Enter		Ok
	Rec / Random		Text				
	Rec / Random		Rec				
	Pause		Pause				
	Open / Close		Eject				
	1		1				
	2		2				

