






 

 

 

 

 

 


 
 


 
 


 
 







 









 







 

 

 









 


 
 









Original	Replacement	Original	Replacement
 Power	 Power	 FAV	 Pre Ch
 Source	 AV	 Setup	 Options
 Light	 Media	 Menu	 Menu
 Text	 Text	 Exit	 Exit
 [≡?]/SUB-T	 Subt	 Up	 Up
 [≡o]/Audio	 Dual	 Down	 Down
 [≡i]/EPG	 Guide	 Right	 Right
 [≡x]/Sat.List	 List	 Left	 Left
 [≡♦]/IPI	 Format	 OK	 Ok
 <<	 <<	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Pause	 Pause	 Mute	 Mute
 >>	 >>	 Info	 Info
 I<<	 I<<	 P+	 Ch +
 Stop	 Stop	 P-	 Ch -
 Rec	 Rec	 Red/Radio	 Red
 >>I	 >>I	 Green/Sleep	 Green





Original		Replacement		Original	Replacement
	Yellow/S/M/D		Yellow		
	Blue/Res		Blue		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	3D		3D		
	Recall		Back		

