






 









 
















 










 
Original	Replacement
 Power	 Power
 Mute	 Mute
 TV / Radio	 TV/R
 Quelle	 Smart
 Letzter	 Pre Ch
 [≡ ≡]	 Text
 +[≡ ≡]	 D. Menu
 PD+	 3D
 Archiv	 Media
 EPG	 Guide
 ▶	 Shift + Pause
 ↻	 Back
 ↑	 Shift + Up
 ⏪	 <<
 ▶	 Play
 ⏩	 >>
 ● Rec	 Rec

Original	Replacement
 ⏮ Time Shift	 Pause
 ■ Live/Stop	 Stop
 Red / PRO	 Red
 Green / [ _ ]	 Green
 Yellow / OPT+	 Yellow
 Blue / [≡]	 Blue
 Liste	 List
 i	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit / Zurück	 Exit
 Vol+	 Vol +
 Vol-	 Vol -





Original	Replacement
 Seite ▲	 >>  >>
 Seite ▼	 I<< I<<
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PIP	 +  Shift + 1
 PIP List	 +  Shift + 2
 PIP Swap	 +  Shift + 3

Original	Replacement
 PIP Size	 +  Shift + 4

