



 




 



 
 
 


 


 
 
 


 
 

 



 

 

 

 

 

 

 


 
 

 


 
 

 


 


 


 





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Source		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		OK		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	TV		TV/R		i/Info		Info
	Recall		Pre Ch		Music/Photo/Phot		Options
	Mute		Mute		Guide		Guide
	Internet		Smart		[≡]/Text		Text
	Vol+		Vol +		*/O		Format





	Original	Replacement	Original	Replacement
	* / Q	3D		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		
	Lang	Dual		
	[≡]..	Subt		
	Rec	Rec		
	[-o-]	Eject		
	Play	Play		
	Stop	Stop		
	Pause	Pause		
	<<	<<		
	>>	>>		

