





Original	Replacement	Original	Replacement
	Power		Power
	Red/Rec/Instant		Red
	Green/<<		Green
	Yellow/Stop		Yellow
	Blue/play		Blue
	White/>>/□		>>
	>◆		D. Menu
	[]		Guide
	[o]/Timer		Sleep
	[?]		Eject
	[◆]		Format
	[≡]/Text		Text
	Menu		Menu
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch





Original	Replacement	Original	Replacement
 [i+]	 Info		
 I-II	 Dual		
 [> <]	 Subt		
 [1 2]	 3D		
 []->	 AV		
 Smart	 Smart		
 [] Smart	 Media		
 [<>]	 Back		
 [-o-]/Active Control	 Options		





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





	Original	Replacement		Original	Replacement
	[> <]	 Subt			
	[1 2]	 3D			
	[]→	 AV			
	♪ Smart	 Smart			
	[] Smart	 Media			
	[<>]	 Back			
	[-o-]/Active Control	 Options			





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original	Replacement	Original	Replacement
 [> <]	 Subt		
 [1 2]	 3D		
 []→	 AV		
 ♪ Smart	 Smart		
 [] Smart	 Media		
 [<<]	 Back		
 [-o-]/Active Control	 Options		

