



 



 


 


 

 
 
 

 

 

 

 
 










Original	Replacement	Original	Replacement
	Power		Power
	Menu		Menu
	Text		Text
	[+]/Aspect		Format
	[≡◆]/STTL		Subt
	Input TV		TV/R
	Input AV		AV
	i		Info
	X/Exit		Exit
	Back/Return		Back
	Option		Options
	Home		Smart
	APPS		Media
	Guide		Guide
	OK		Ok
	Up		Up
	Down		Down

Original	Replacement	Original	Replacement
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Original		Replacement		Original		Replacement	
	7		7				
	8		8				
	9		9				
	0		0				
	Off Timer		3D				
	Last View		Pre Ch				
	?/Help		D. Menu				
	Play		Play				
	>>		>>				
	<<		<<				
	Pause		Pause				
	>>		>>				
	<<		<<				
	Stop		Stop				
	Rec		Rec				

