
 



 


 
 

 






 

 

 




Original	Replacement
	 Power
	 Source
	 9 / Disp
	 Eject / GOTO
	 V+
	 V-
	 <<
	 Play / Band
	 >>
	 -
	 IIAng
	 +
	 <
	 Stop / Random
	 >
	 3 / Exit
	 2 / Menu

Original	Replacement
	 Up
	 Down
	 Right
	 Left
	 OK

