

 

 

 
 
 
 
 

 

 

 
 
 
 
 

 

 






 








 

 







Original	Replacement
 Power	 Power
 Play Mode	 Shift + Play
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/-/-	 Guide
 Repeat	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 DVD	 Red
 Radio	 TV/R
 Ext-In	 Yellow
 << Slow Search	 <<
 Play	 Play
 Slow Search >>	 >>
 I<< Skip/Down	 I<<
 Pause	 Pause
 Skip >>I/Up	 >>I
 Stop	 Stop
 Surround	 Subt
 Sound	 Dual
 Top Menu/Direct Navigator	 List
 Start	 Smart
 Functions	 Options
 Menu/Play List	 Menu
 Return	 Back





Original		Replacement		Original		Replacement	
	Up		Up				
	Down		Down				
	Right/II>		Right				
	Left/<II		Left				
	OK		Ok				
	Setup/-CH Select		D. Menu				
	W.SRD		AV				
	FL Display/-Sleep		Sleep				
	Cancel		Exit				
	Power Tv		Shift + Power				
	AV Tv		Shift + AV				
	Vol+ Tv		Shift + Vol +				
	Vol- Tv		Shift + Vol -				

