

 
 
 

 

 


 


 

 

 
 
 
 
 
 
 
 






 

 

 



 





Original	Replacement	Original	Replacement
	Power		Power
	Camera		Info
	Vol+		Vol +
	Vol-		Vol -
	T		Ch +
	W		Ch -
	Start/Stop		Media
	Ext/Display		AV
	Date/Time		Smart
	<< Search		<<
	Play		Play
	Search >>		>>
	<I Still Adv		Red
	Pause		Pause
	Still Adv I>		Green
	I<<		I<<
	Stop		Stop
	>>I		>>I
	Bin		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

