



Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Auto Off		Shift + Power
	CD/RDS Disp		Info
	Clock / Timer		Shift + AV
	Dimmer		Media
	Timer Play / Rec		Rec
	Disc		Smart
	1 / Disc 1		1
	2 / Disc 2		2
	3 / Disc 3		3
	4 / Disc 4		4
	5 / Disc 5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10		Guide
	Program		Shift + Sleep
	Play Mode		Shift + Play
	CD Play/Pause		Play
	Tuner Band		TV/R
	Stop / Clear		Stop
	Stop / Clear		Exit
	Tape Play		Pause
	AUX		AV
	Vol -		Vol -
	+ Vol		Vol +
	I<< / REW / Down		<<
	I<< / REW / Down		I<<
	>>I / Up / FF		>>
	>>I / Up / FF		>>I
	S.Sound EQ		Dual



