 







 

 

 

 

 

 

 

 

 

 

 



 
 


 
 



 
 

 
 


 
 


 
 
 
 
 
 
 
 
 
 
 
 
 


 




Original	Replacement	Original	Replacement
 DVD/VHS Power	 Power	 0	 0
 Drive Select	 Media	 */Delete/Reset	 Shift + Exit
 TV Power	 Shift + Power	 Input Select	 AV
 TV AV	 Shift + AV	 CH+/Tracking/V-Lo	 Ch +
 TV CH+	 Shift + CH +	 CH-/Tracking/V-Lo	 Ch -
 TV CH-	 Shift + CH -	 ShowView	 Smart
 TV Vol+	 Vol +	 Prog / Check	 Sleep
 TV Vol-	 Vol -	 I<< Skip/Index	 I<<
 1	 1	 Skip/Index >>I	 >>I
 2	 2	 <<	 <<
 3	 3	 Slow/Search/Rew	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 i/Status	 Info
 8	 8	 Exit	 Exit
 9	 9	 Guide	 Guide



