



Original	Replacement	Original	Replacement
	Power		Setup / OPT /
	Muting		Test
	Play		TV / AV
	Pause		Menu
	Stop		Up
	<< Slow/Search		Angle
	Slow/Search >>		Left
	I<</Skip Down		Enter / Set
	>>I / Skip Up		Right
	Subwoofer		Cancel
	Audio		Down
	Subtitle		Return
	SFC		Vol+
	OSD		Page
	Timer		CH Select
	TV		Vol-
	Top Menu		Display
	Power		Setup / OPT /
	Mute / Dimmer		Text / Goto
	Play / Slow		AV / Input / RDS
	Pause / Step / Freeze		Menu / Home
	Stop / Hold		Up
	<< / Tune-		Info / Angle
	>> / Tune+		Left
	I<< / Preset-		OK
	>>I / Preset+		Right
	Sound / Title		Exit / Cancel / Clear
	Audio / Lang I/II		Down
	Subtitle / EQ		Back / Return
	Eject / Surround		Vol+
	Picture / Format		Smart / List
	Sleep / Timer		CH+ / Page+
	TV/Radio /		Vol-
	D.Menu / Top		Display / Media





	Original	Replacement	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/11		Guide / EPG / 10/11
	0		0
	Repeat		Green / APP / Repeat
	A-B Repeat		Yellow / YouTube / Repeat
	Power VCR		Shift + Power
	Play Mode		Shift + Play /
	Super Surround		Shift + Sound / Title
	Audio Only		Shift + Audio / Lang I/II

	Original	Replacement	
	Dolby PL		Shift + Subtitle / EQ
	FM Mode		Shift + TV/Radio / Program
	D.MIX		Shift + D.Menu / Top Menu
	Group		Shift + Setup / OPT / Tools
	RDS		Shift + AV / Input / RDS
	Center Focus		Shift + OK
	Position		Shift + Smart / List
	DVD/CD		Shift + 2
	Tuner/Band		Shift + 6

