

 


 


 


 
 










 






 





 








 

 
 


 



 

 

 


 



 










 

 

 



 
 



 




 





 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Tv/Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/Input Select		AV
	-/--		Guide
	Tracking/V-Lock+		Ch +
	Tracking/V-Lock-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Search		Shift + TV/R
	Show View		Smart
	OSD/Display		Info
	Replay		Pre Ch
	Direct Tv Rec		TV/R
	I<< Index		I<<
	Index >>I		>>I
	Rec		Rec
	Pause/Step		Pause
	Menu		Menu
	OK		Ok
	Play/Up		Play
	Stop/Down		Stop
	>>/Right		>>
	<</Left		<<
	SP/LP		Format

 













Original	Replacement	Original	Replacement
 Timer Rec	 3D	 Exit	 Exit
 Prog/Check	 Sleep		
 Reset	 Back		
 Audio	 Dual		
 VPS/PDC	 Subt		
 AV Link	 Media		
 TV Aspect	 Eject		
 Still Album	 List		
 Up	 Up		
 Down	 Down		
 Date+	 Right		
 Date-	 Left		
 On+	 Red		
 On-	 Green		
 Off+	 Yellow		
 Off-	 Blue		
 Cancel	 D. Menu		





Original	Replacement
	 Power
	 Text
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide

Original	Replacement
	 AV
	 Red
	 Green
	 Yellow
	 Blue

